



DMXEtherGate used as Input for Visualizer


DMX Console

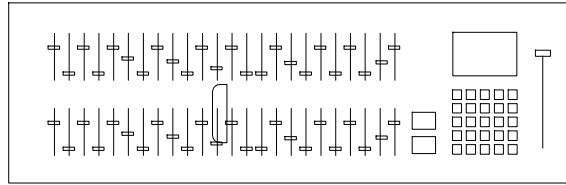

Back View

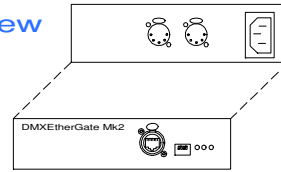

Front View

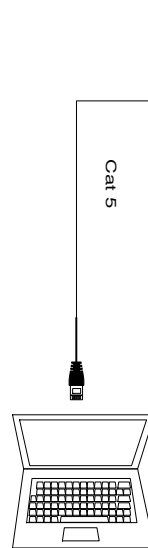

Computer running Capture
WYSIWYG, Arkaos or similar.

P.O. Box 282
Kew, Vic 3101
Australia
+61 39 819 2433 Tel
+61 39 819 2733 Fax

ENTTEC PTY LTD

ENTTEC USA
SALES AND INFO
337 Court Street
Brooklyn, NY 11231
888 454-5922 Voice/Fax

PLATE

70018-1

Schematic

DMXEtherGate used as Input for Visualizer

SCALE: n/a


Some elements drawn out of scale for clarity

DRAWING DATE: 4/16/2007

DRAWN BY: J KUMIN


DMXEtherGate used with Datagate DME for
Cat5 runs of merged signals for 2 universes.

DMX Consoles

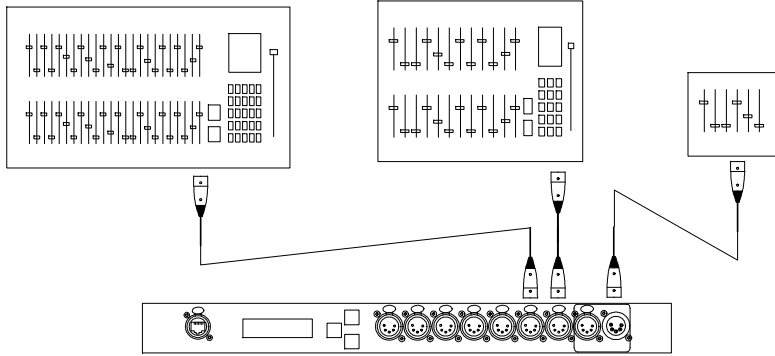


Datagate DME
(Use Gender Changers for ports 6 & 7)


DMXEtherGate

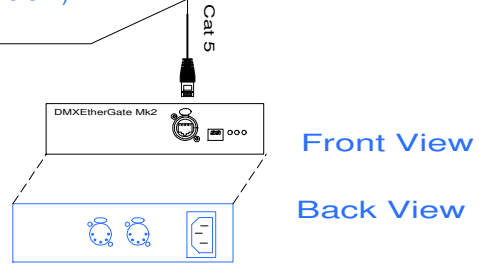

DMX
controlled
fixtures

 

Dimmers

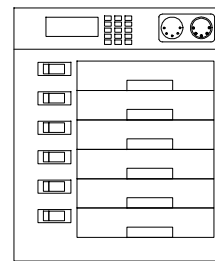

P.O. Box 282
Kew, Vic 3101
Australia
+61 39 819 2433 Tel
+61 39 819 2733 Fax

ENTTEC PTY LTD

ENTTEC USA
SALES AND INFO
337 Court Street
Brooklyn, NY 11231
888 454-5922 Voice/Fax

PLATE

70018-2

Schematic

DMX to Merger to DMXEtherGate: 2 univ


SCALE: n/a

Some elements drawn out of scale for clarity

DRAWING DATE: 4/16/2007

DRAWN BY: J KUMIN

DMXEtherGate used for wireless DMX transmission

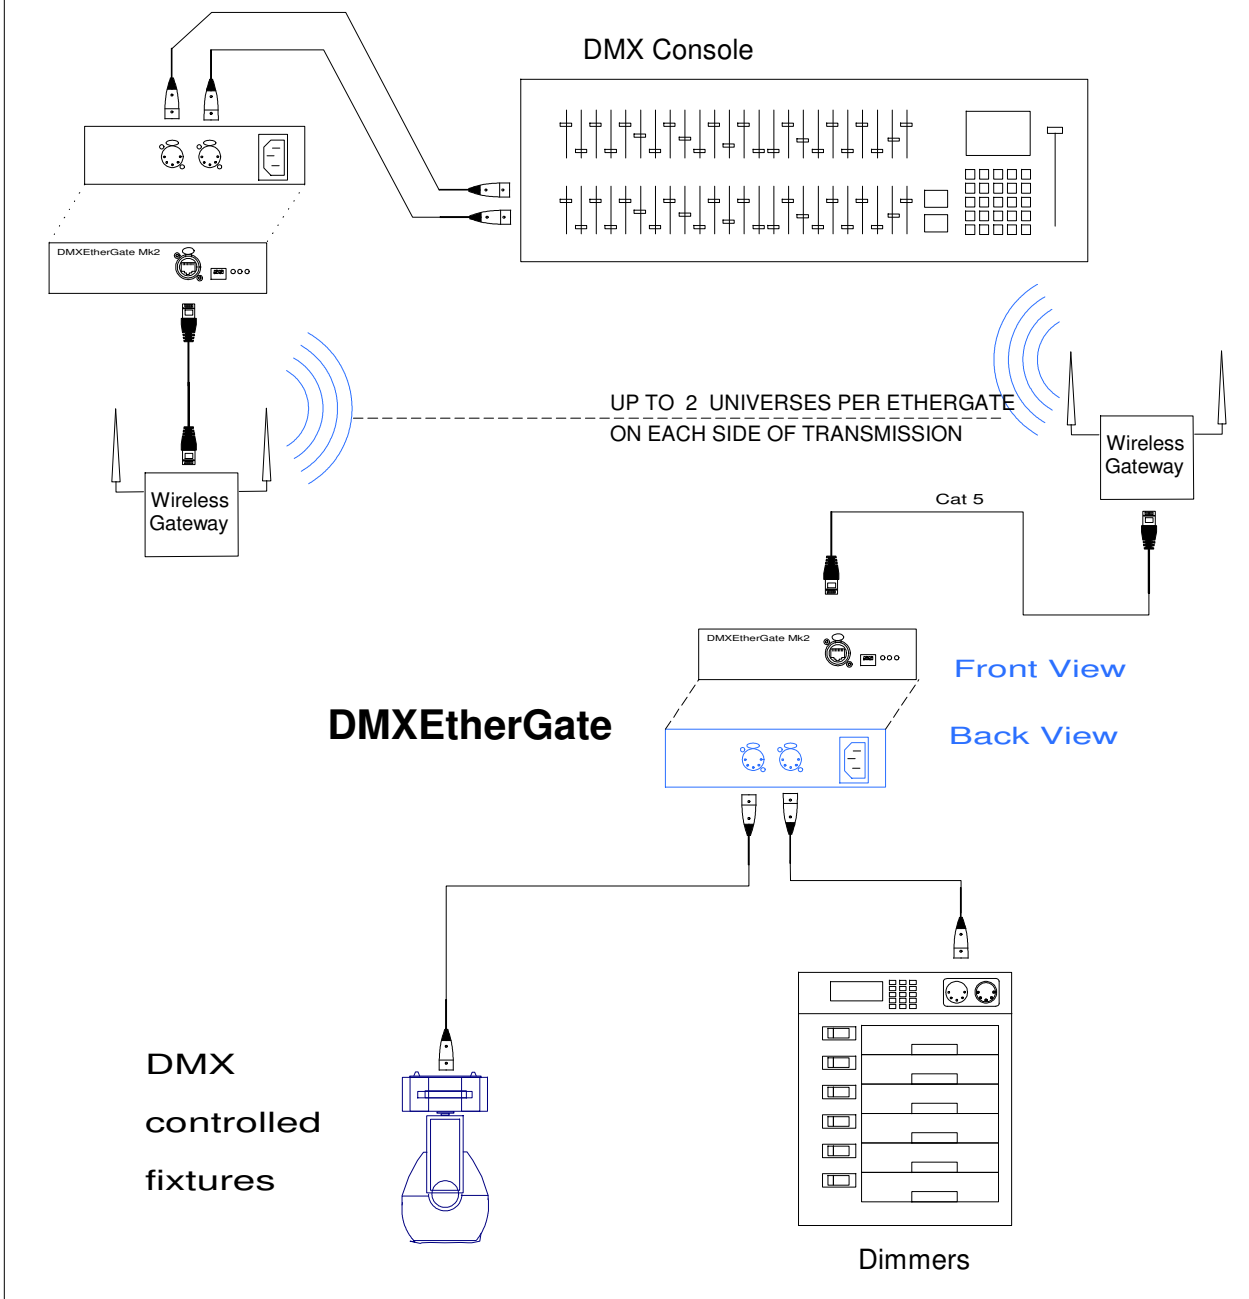

P.O. Box 282
Kew, Vic 3101
Australia
+61 39 819 2433 Tel
+61 39 819 2733 Fax

ENTTEC PTY LTD

ENTTEC USA
SALES AND INFO
337 Court Street
Brooklyn, NY 11231
888 454-5922 Voice/Fax

PLATE

70018-3

Schematic

DMX EtherGate used for wireless DMX transmission

SCALE: n/a

Some elements drawn out of scale for clarity

DRAWING DATE: 4/16/2007

DRAWN BY: J KUMIN